



Title: Typical 10' x 10' Patio		Notes: Patio consists of 25 tiles arranged in a 5 x 5 grid. Nominal size 10' x 10'. Installed size is 9'-81/4" x 9'-81/4".		
Date Original: 02/25/09	Scale: 1/2" = 1'			
Revised Date: 02/25/09	Job No. Generic_10x10	Drawn By: set	Checked By:	Page: 1 of 3

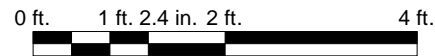

## Detail of Portable Patio Tile

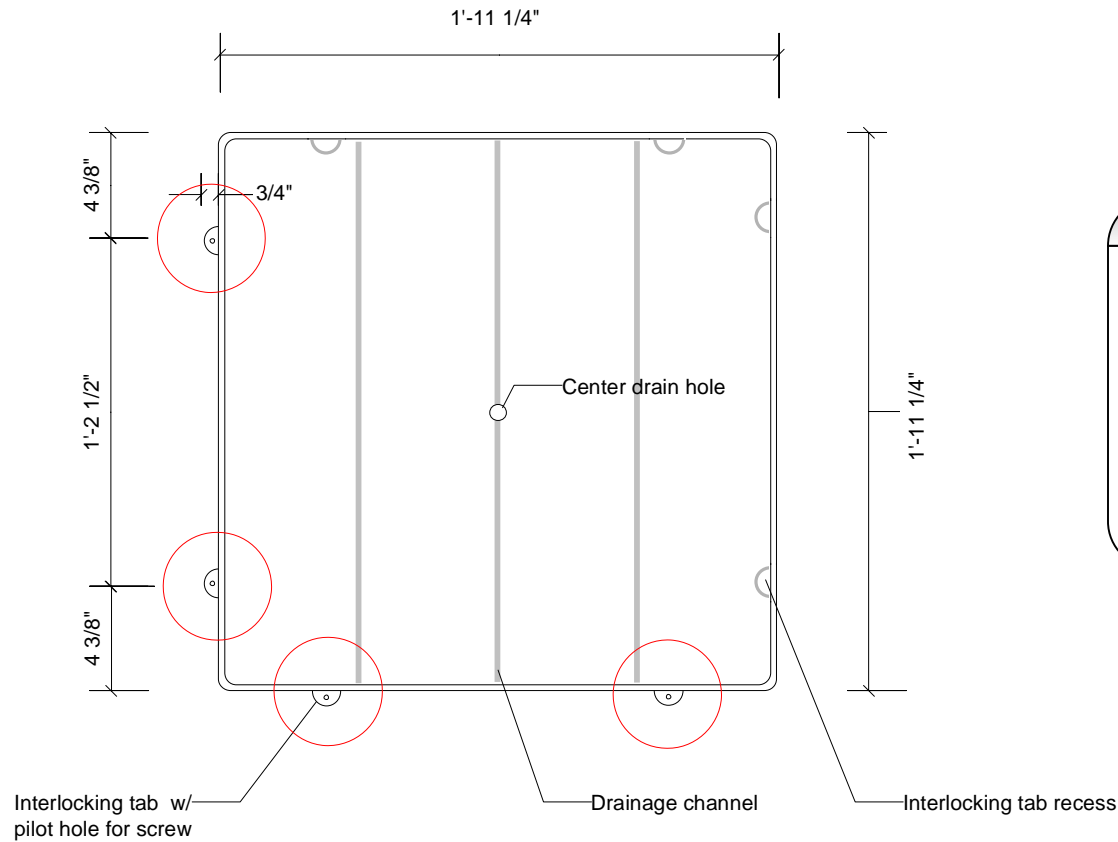

= Location of optional screws


**Portable Patio Tile Specs**

Nominal tile size: 2 ft x 2 ft x 1 inch thick  
 Installed tile size: 1' 11 1/4" x 1' 11 1/4" x 1" thick


Color: Light tan, light grey, black or pink  
 Surface: Non-slip surface is textured  
 Material: Precision molded polypropylene (similar to pick up bed liners)

Installation: Modular sections can be tiled in any direction using interlocking tabs to form a larger, mechanically integrated patio. The tiles may be semi-permanently secured to by using metal or plastic screws through a pilot hole in each tab. We recommend #12 x 3/4-inch stainless steel screws. Unused tabs may be removed (cut with a utility knife) for a finished appearance.

Made in USA

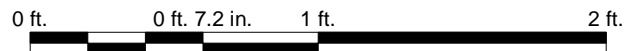


Title: Detail of Portable Patio Tile.		Notes: Plan view of tile.		
Date Original: 07/31/06	Scale: 1-1/2" = 1'-0"			
Revised Date: 07/31/06	Job No.	Drawn By: set	Checked By:	Page: 2 of 3

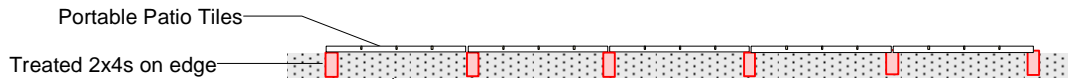

**Cross Section View**  
 Treated 2x4's (red) should be buried on edge and level with the earth surface. An option is to remove approx. 4" of earth and slightly overfill with washed "P" stone gravel.

As an option, you can use washed "P" stone gravel underneath the patio deck. This will facilitate drainage. Top of gravel should be slightly above (1/4" - 3/8") the top of the 2x4's to provide support across the tiles and allow for settling.

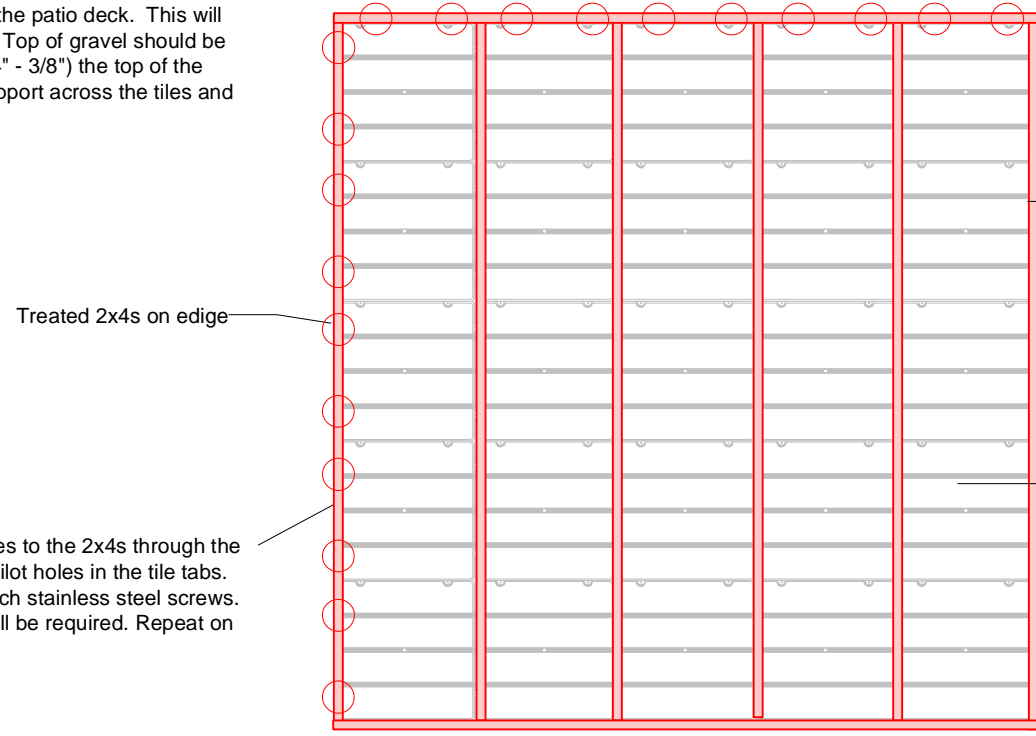


**Plan View**  
 Treated 2x4's (red) run the length of the patio centered underneath the pre-formed pilot holes in the tile tabs. If the ground surface is sloped, run the 2x4's "down hill" to facilitate drainage.

Treated 2x4s on edge

The Portable Patio tiles are shown in grey. The molded drainage channels (grey lines) should be perpendicular to joists for added stiffness.

Screw the tiles to the 2x4s through the pre-formed pilot holes in the tile tabs. Use #10 2-inch stainless steel screws. 80 screws will be required. Repeat on each 2x4.

○ = Location of Screws  
 (repeat on each 2x4)

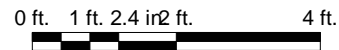

Title: Optional Installation of a Typical 10' x 10' Patio on a Wood Under Frame		Notes: Patio consists of 25 panels in a 5 x 5 grid. For stiffness, run joists perpendicular to drainage channels of tiles.		
Date Original: 02/25/09	Scale: 3/8" = 1'			
Revised Date: 02/25/09	Job No. Generic_10x10	Drawn By: set	Checked By:	Page: 3 of 3